

---

Document Name: User Manual for SP485 –RS485 Surge Protector

### **Introduction:**

SP485 uses a mix of various protection devices to obtain a well balanced surge protector. This a good alternative for long cable runs through noisy areas or during lightening & noisy transients.

### **INTERFCAE DETAILS -**

RS485/ RS422 Input : - Terminal Strip  
RS485/ RS422 Output : - Terminal Strip.

### **Input / Output Signals & connection details.**

For RS 485 / RS422

| <b>Input SIGNAL of SP485 /RS422</b> | <b>Will Connect to</b> |
|-------------------------------------|------------------------|
| TX +                                | TX + of your device.   |
| TX --                               | TX -- of your device.  |
| RX +                                | RX + of your device.   |
| RX --                               | RX – of your device.   |
| Earth                               | Connected to Earth.    |

| <b>Output SIGNAL of SP485/RS422</b> | <b>Will Connect to</b> |
|-------------------------------------|------------------------|
| TX +                                | RX + of your device.   |
| TX --                               | RX -- of your device.  |
| RX +                                | TX + of your device.   |
| RX --                               | TX – of your device.   |

For RS 485 2 Wire, Please use only TX+ & TX- Signals.

**POWER SUPPLY** - No Power Supply needed